

Beldray^{est 1872}[®]

Lightweight
and easy to
manoeuvre –
only 650 grams



REVO
CORDLESS
INSTRUCTION MANUAL



www.beldray.com

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance away from heat or sharp edges that could cause damage.

Keep the appliance away from other heat emitting appliances.

Keep the appliance free from dust, lint, hair or anything that may reduce the airflow of the appliance.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not expose the appliance to rain.

Do not remove the adaptor from the mains power supply by pulling the cord; switch off and remove the plug by hand.
Do not use the adaptor to recharge non-rechargeable batteries.
Do not use the appliance if it has been dropped or if there are visible signs of damage.
Do not use the appliance for anything other than its intended use.
Do not use any parts/accessories or adaptors other than those supplied with this appliance, as this may cause damage.
Do not use any damaged accessories or adaptors.
Do not use this appliance outdoors.
Do not store the appliance in direct sunlight or in high humidity conditions.
Do not use this appliance if any of the openings are blocked.
Do not use the appliance to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.
Do not use this appliance to pick up hard, sharp objects such as glass or nails etc.
Do not use the appliance to pick up water or any other liquid, as this poses risk of an electric shock.
Take care when equipping accessories with rotating parts as this could cause entrapment.
Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.
Always ensure that the appliance has cooled fully after use before performing any cleaning or user maintenance.
Use of an extension cord with the appliance is not recommended.
Only use the appliance with the power supply unit provided.
This appliance should not be operated by means of an external timer or separate remote control system.
This appliance is intended for domestic use only. It should not be used for commercial purposes.

Battery Safety

The supply terminals are not to be short-circuited.

In the event of a battery pack leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Secondary cells and batteries need to be charged before use.

After extended periods of storage, it may be necessary to charge and discharge the battery pack several times to obtain maximum performance.

Do not leave a battery pack on prolonged charge when not in use.

Do not use any charger other than that specifically provided for use with the appliance.

Do not use any cell or battery which is not designed for use with the appliance.

Keep batteries out of the reach of children.

Do not dispose of batteries in a fire.

Do not dismantle, open or shred battery packs.

Do not expose cells or batteries to heat or fire.

Do not crush, puncture, dismantle or otherwise the battery pack.

Do not store above 60 °C.

Avoid storage in direct sunlight.

Do not expose battery packs to heat or fire as they may explode.

Do not subject battery packs to mechanical shock.

Do not dispose of exhausted battery packs in household waste.

To dispose of the exhausted battery pack, take it to a local recycling station. Contact the local government offices for further details.

This appliance is fitted with a non-removable 11.1 V 2200 mAh Li-ion battery pack.

Care and Maintenance

Always unplug the vacuum cleaner from the mains power supply before attempting any cleaning or maintenance.

Wipe the external surface of the vacuum cleaner with a soft, damp cloth and allow to dry thoroughly.

Do not use any detergents or harsh cleaning agents to clean any part of the vacuum cleaner.

Do not immerse the vacuum cleaner in water or any other liquid.

Keep the HEPA filter clean after every removal of the dust container.

Dos and Don'ts

Do:

Check that the HEPA filter is kept clear of obstruction.

Make sure that the dust container and HEPA filter are cleaned regularly to preserve suction and prolong the life of the vacuum cleaner.

Don't:

Use the vacuum cleaner without the HEPA filter or dust container in position.

Use the vacuum cleaner to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Use the vacuum cleaner to pick up water or any other liquid, as this poses risk of an electric shock.

Getting Started

Remove the vacuum cleaner from the box.

Remove any packaging from the vacuum cleaner.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Revo Cordless

Crevice/brush tool

Upholstery tool

Filter cleaning brush

Charging base

Mains power adaptor

Instruction manual

Features

11.1 V lithium-ion battery for long-lasting power

4-5 hours charge time

15-30 mins operating time

Dual speed with boost function

100 ml easy-to-empty dust container

HEPA filter with protective metal casing

Compact storage and charging base

Includes crevice/brush and upholstery tool

Description of Parts



- 1. Revo Cordless main unit
- 2. Power button
- 3. Boost button
- 4. Charging base
- 5. Charging port
- 6. HEPA filter
- 7. Filter cone

- 8. Crevice tool
- 9. Upholstery tool
- 10. Brush tool
- 11. Dust container
- 12. Dust container front release button
- 13. Dust container rear release buttons
- 14. Indicator light

Instructions for Use

Before First Use

Before using the vacuum cleaner for the first time, clean it with a soft, damp cloth and dry thoroughly.

Do not immerse the vacuum cleaner in water or any other liquid.

Charging the Revo Cordless

Before first use, the vacuum cleaner must be charged for approx. 4-5 hours. Subsequent charging times will vary dependent on use. If the vacuum cleaner battery becomes drained completely during use, it may take up to 4-5 hours to fully recharge.

STEP 1: Check that the vacuum cleaner is switched off.

STEP 2: Secure the vacuum cleaner into position in the charging base and connect the mains power adaptor to the charging port.

STEP 3: Plug the mains power adaptor into the mains power supply; the indicator light will flash red during charging. Once the battery is fully charged, the indicator light will stop flashing and turn blue.

Note: Whilst charging, the vacuum cleaner main unit may become warm. Always make sure that the mains power adaptor is unplugged from the mains power supply once the battery is fully charged.

Warning: Do not use any mains power adaptor other than that supplied. Using an alternative will increase the risk of damage to the appliance or injury to the user.

Using the Revo Cordless

The crevice tool is ideal for cleaning radiators, corners, recesses and other hard-to-reach areas. The upholstery and brush tools are useful for removing dust and dirt from folds in fabrics, curtains and upholstery, as well as from shelves, cupboards and windowsills.

STEP 1: Check that the vacuum cleaner is switched off and remove it from the charging base.

STEP 2: If required, fit the selected attachment by firmly inserting it into the air inlet. The brush tool does not insert into the air inlet directly; it must first be attached to the crevice tool.

STEP 3: Turn on the vacuum cleaner by pressing the power button. Press the boost button to use the maximum power setting; the indicator light will illuminate blue. To use the minimum power setting, press the boost button again; the indicator will illuminate red.

Note: The indicator light will flash when the battery is running low and needs to be charged.

Warning: Do not use the vacuum cleaner without the HEPA filter, filter cone and dust container in position.

Clean the HEPA filter regularly to preserve suction.

Emptying the Dust Container

To maintain optimum performance, the dust container must be emptied regularly. If there is a reduction in suction power, empty the dust container.

STEP 1: Hold the vacuum cleaner with the dust container facing upwards. Press the dust container front release button and carefully remove the dust container cover from the dust container.

STEP 2: Empty the dust container slowly and carefully to reduce the amount of dust released back into the atmosphere. If necessary, clean the individual parts with a soft, damp cloth and dry thoroughly.

STEP 3: Refit the dust container cover by aligning it with the vacuum cleaner main unit and pushing into place until it clicks.

Note: It is recommended that the dust container is emptied outdoors.

Cleaning the HEPA Filter and Filter Cone

The HEPA filter can only be accessed when the dust container is removed.

STEP 1: After emptying the dust container following the instructions in the section entitled 'Emptying the Dust Container', remove the dust container by pressing both of the dust container rear release buttons at the same time and sliding the dust container away from the main unit.

STEP 2: Remove the HEPA filter and filter cone by pulling them away from the dust container. Rotate the HEPA filter in an anticlockwise direction to the unlocked position and then lift away from the filter cone.

STEP 3: Shake the HEPA filter until the majority of the dust has been removed, then rinse the filter and filter cone under clean, warm water and allow to dry naturally.

STEP 4: Once both are fully dry, place the HEPA filter back into the filter cone and rotate it in a clockwise direction to lock it in place.

STEP 5: Refit the filter cone into the dust container. Replace the dust container by pushing it into the main unit, aligning the latch with the indent.

Note: The HEPA filter and filter cone should be thoroughly cleaned at least once every three weeks.

Do not clean the HEPA filter using detergent or use external heat sources, such as a radiator to dry it.

Always clean the HEPA filter and filter cone with the brush provided and only when the dust container is empty.

Warning: Do not reassemble or use the vacuum cleaner until the HEPA filter and filter cone have fully dried, as this could cause damage.

Storage

The vacuum cleaner must be cool, clean and dry before storing in a cool, dry place. Store the mains power adaptor separately, checking that it is not bent at the connections, as this could cause damage to the wires.

Troubleshooting

Symptom	Possible Cause	Solution
The vacuum cleaner will not charge.	The mains power adaptor is not securely connected.	Secure the vacuum cleaner into the charging base and then switch it on at the mains power supply.
	The vacuum cleaner isn't fully inserted into the charging base.	Check that the vacuum cleaner is fully secured into the charging base.
The suction is poor.	The air inlet or attachment is blocked.	Disconnect the attachment and clear any blockage.
	The dust container is almost full.	Empty the dust container following the instructions in the section entitled 'Emptying the Dust Container'.
	The HEPA filter is blocked.	Clean the filter following the instructions in the section entitled 'Cleaning the HEPA Filter and Filter cone'.
	The battery is running out of charge.	Recharge the vacuum cleaner following the instructions in the section entitled 'Charging the Revo Cordless'.
The vacuum cleaner has stopped working.	The battery has run out of charge.	Recharge the vacuum cleaner following the instructions in the section entitled 'Charging the Revo Cordless'.



Specifications

Product code: BEL0944RD

Battery: 11.1 V 2200 mAh Li-ion (included)

Input: 14 V DC 500 mA

Dust container capacity: 100 ml

Notes:

UP Global Sourcing UK Ltd., Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday-Friday, 9 am-5 pm (Closed Bank Holidays)

Email: customersupport@beldray.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelee bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



 **3 YEAR**
GUARANTEE*

*To be eligible for the extended guarantee, go to www.beldray.com and register your product within 30 days of purchase.

Rechargeable batteries are not included in the extended manufacturer's guarantee (after the first 12 months).

Find us on 

www.facebook.com/Beldray



Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK
+44 (0)333 577 9820

customersupport@beldray.com

©Beldray Trademark. All rights reserved.

Please retain instructions for future reference.

Made in China.

CD161019/MD051219/V2

